


- NOTES:
1. OPEN CUT INSTALLATIONS WILL REQUIRE 12 GAUGE PVC COATED COPPER WIRE.
 2. TRENCHLESS INSTALLATIONS WILL REQUIRE FOUR #14 WIRES BEING INSTALLED WITH THE PIPE AND CONNECTED TO THE TRACER WIRE AT BOTH ENDS, OR CAD WELDED TO THE EXISTING IRON PIPE AT BOTH ENDS.
 3. CONTRACTOR SHALL INSTALL DUMMY VALVE BOXES AT INTERVALS NO GREATER THAN 1000 FEET.
 4. THE WIRE AND TAPE SHALL MEET BCWS STANDARDS.
 5. TRACER WIRE SHALL BE BLUE IN COLOR FOR WATER MAIN.

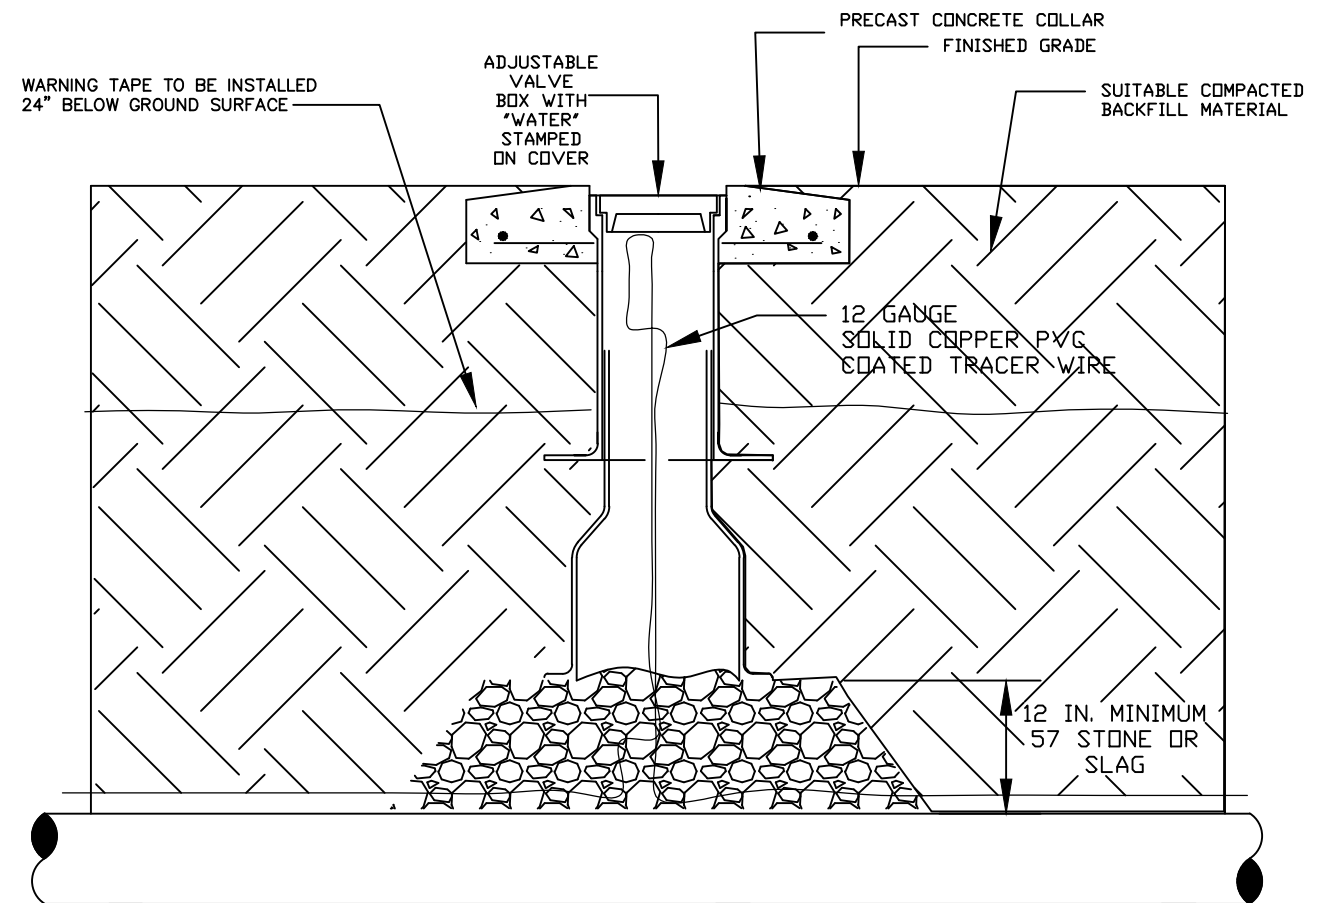

DUMMY VALVE BOX DETAIL

NOT TO SCALE

TRACING WIRE INSTALLATION DETAIL

NOT TO SCALE

WATER PANEL 10

BERKELEY COUNTY WATER AND SANITATION
POTABLE WATER & SANITARY SEWER STANDARDS

REVIEWED 05/15/20