


NOTES:

1. CENTER VALVE BOX OVER OPERATING NUT TO INSURE FREE VALVE OPERATION.
2. USE TELESCOPING VALVE BOX ON ALL VALVES.
3. SUPPORT VALVE BOX BOTTOM ON WELL COMPACTED BACKFILL. DO NOT ALLOW VALVE BOX TO REST ON ANY PORTION OF VALVE.
4. USE 6" D.I. RISER ON DEEP VALVE INSTALLATION. TELESCOPING VALVE BOXES ARE AVAILABLE FOR DEPTHS UP TO 6'10".

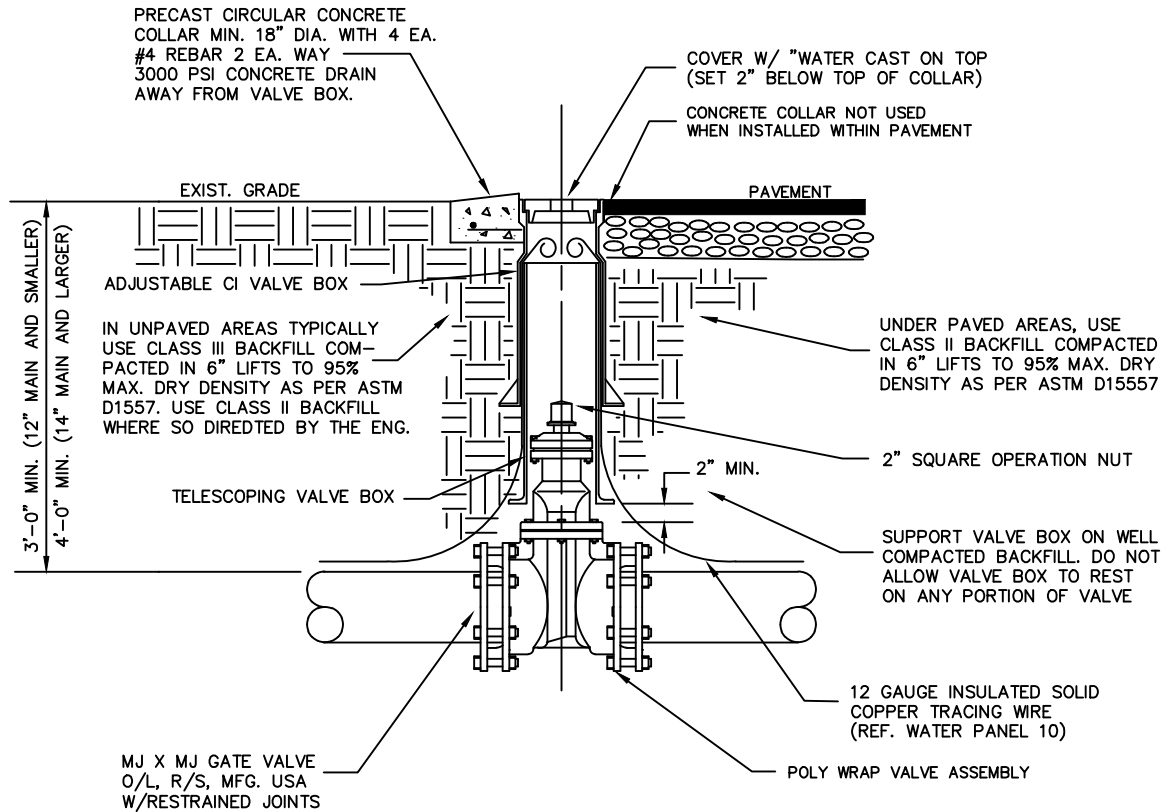

*TYPICAL VALVE*  
*AND VALVE BOX INSTALLATION DETAIL*

NOT TO SCALE

**WATER PANEL 3**